



The settings you will see below are supplied as a basic sample of where to start with settings for your pinsetters and how they will operate with Steltronic Focus Software.

The examples below are a starting point, and some fine tuning may be required.

On the last page of this document, you will find some descriptions of the settings. The descriptions are more detailed than what can be displayed on the screens.

If you have any questions, please contact [Steltronic Technical support](#)

Schmidt PBS 81-5 Pinsetters.

In the pair settings of all lanes, make this change here to score correctly.

The screenshot displays the 'Pair Settings' window for three items. The 'VLC Settings' tab is selected, showing the '5 pin scramble' configuration. A red callout box highlights the 'Out Pin 4' and 'Out Pin 5' dropdown menus, which are currently set to 4 and 5 respectively. A text box says 'Take notice these have to be changed'. The interface also shows a table of pair settings, various configuration tabs, and a bottom toolbar with buttons like 'Reboot', 'Shutdown', 'Sync Files', 'Unlock pair', 'Send to lane', and 'Send to lane and Close'.

Pair Number	Lanes Number	I.P. Address	Program Version	Last Update	64BitOs
1	1-2	10.11.45.54	12.61.0.0	8/11/2017 12:41:33 PM	<input checked="" type="checkbox"/>
2	3-4	10.11.45.78	12.61.0.0	8/11/2017 12:41:33 PM	<input checked="" type="checkbox"/>
3	5-6	10.11.45.81	12.63.0.0	8/11/2017 12:41:33 PM	<input checked="" type="checkbox"/>

5 pin scramble

- Out Pin 1: 1
- Out Pin 2: 2
- Out Pin 3: 3
- Out Pin 4: 4
- Out Pin 5: 5

SGEI Duration: 10.0

Language: en-US

VLC auto restart

Restart time: Enable

6 < > << >> HH

0 < > << >> MM

Reboot Shutdown Sync Files Unlock pair Send to lane Send to lane and Close

Emergency shutdown TRAINING MODE ACTIVE Open Cash Drawer

On the pinsetter settings for all tabs (Basic, Advanced 1, Advanced 2) use these examples below.

The screenshot displays the 'Pinsetter Settings' interface with a teal header and a large white content area. At the top left, there are six numbered icons representing different pinsetter configurations. Below the icons, the interface is divided into four tabs: 'Basic', 'Advanced 1', 'Advanced 2', and 'Live view'. The 'Basic' tab is currently selected and contains the following settings:

- Pinsetter control:** Radio buttons for On, Practice, Off, Auto (selected), and Extern.
- Firmware: YA**
- Practice mode settings:** Radio buttons for Throws and Time (selected).
- Quantity (Thr / Min):** A numeric input field set to 5.
- Pinsetter to Auto at the End of Practice:** Radio button.
- Advanced settings:** Radio buttons for Pinsetter phased with score, During Practice: Full set of pins for every ball, Pinsetter on when practice (checked), Disable cycle with no active players, and Automatic foul line.

At the bottom of the 'Basic' tab, there is a 'Note' section with five icons and their corresponding descriptions: a checkmark for 'Setting enabled for the items selected', a greyed-out radio button for 'Setting disabled for the items selected', a lightbulb for 'The selected items do not have the same setting', a green background for 'This background is for items who apply to the whole part', and a grey background for 'This background is for items who apply to the single lane'. Below the note are several buttons: 'Set Pins and First Ball', 'Set Pins and Second Ball', 'Figures', 'Cycle or Reset Pinsetter', and 'Set Pinsetter'. At the bottom right, there are two buttons: 'Send to lane' and 'Send to lane and close'.

Pinsetter Settings [6 items]



Basic

Advanced 1

Advanced 2

Live view

Hardware connection

- Off
- Ball Change
- A.P.S. on 1st Ball
- A.P.S. on 1st / 2nd Ball
- Gutter plus Strike
- Gutter plus Strike also for Foul

Pinsetter Type

Schmid PBS81-5 (String 5pin)

Special cycles

- Automatic Foul Line Management
- Change ball if gutter or 7-10
- No tap and 10th frame respot
- Modified cycle for strike

- Wait for 2nd Ball signal before Respot Delay
- 1st Ball Cycle after photo
- 2nd Ball Cycle after photo

- Respot Delay (sec.) 2.0
- 1st Ball Extra Cycle Delay (sec.) 2.0
- 2nd to 1st Ball Change Delay (sec.) 2.0
- Extra cycle delay when foul and strike (sec.) 2.0
- Open Lane In Phase (sec.) 2
- Power Off Delay (sec.) 15
- Ball return power off delay (sec.) 20

Note Setting enabled for the items selected Setting disabled for the items selected The selected items do not have the same setting This background is for items who apply to the whole bar This background is for items who apply to the single lane

Set Pins and First Ball | Set Pins and Second Ball | Fibers

Cycle or Reset Pinsetter | Set Pinsetter

Send to lane | Send to lane and close

Pinsetter Settings [6 Items]



To set the full rack of pins after ball # 3 is rolled, check this box here

Basic

Advanced 1

Advanced 2

Live view

2nd Ball lamp after chg ball max delay (sec.) 0.0 Timed MGR cmd (sec.) 0.0

Extra features

- Full Set to close Frame
- Full Set with Spare or Strike
- Reset after Ready
- Convertible 5 and 10 Pin
- Shield Installed

- Set Pinsetter Enabled
- XLI Foul in Warning mode
- Override Practice settings when playing Tournament
- Figures**
- No Figures
- GS-X Figures
- GS Figures
- GS-X and TMS Set Pins Enabled

Note: Setting enabled for the items selected Setting disabled for the items selected The selected items do not have the same setting This background is for items who apply to the whole post This background is for items who apply to the single lane

Buttons: Set Pins and First Ball, Set Pins and Second Ball, Figures, Cycle or Reset Pinsetter, Set Pinsetter

Buttons: Send to lane, Send to lane and close

In the configuration manager, pinsetters, you can use these settings below for parameters.

Schmid PBS81-5 (Strin...	
Name	Schmid PBS81-5 (Strin...
Par_0	15
Par_1	255
Par_2	16
Par_3	128
Par_4	16
Par_5	128
Par_6	4
Par_7	4
Par_8	10
Par_9	10
Par_10	7
Par_11	127
Par_12	27
Par_13	15
Par_14	32
Par_15	12
Par_16	0
Par_17	1
Par_18	0
Par_19	0
Par_20	0
Par_21	138
Par_22	50
Par_23	0
Par_24	156
Par_25	156
Par_26	7
Par_27	0
Par_28	12
Par_29	10
Par_30	100
Par_31	0
Par_32	0
Par_33	0
Par_34	0
Par_35	0
Par_36	0
Par_37	0
Par_38	0
Par_39	0
Par_40	0
Par_41	0
Par_42	0

Basic tab options

- Pinsetter Control: I think that it is already clear...
- Pinsetter Phased with score: if selected, when pinsetter and score are not on the same ball, the pins are not scored and no special cycles are executed (only normal cycle is executed)
- Ten pins in practice mode: if selected, when the Pinsetter control is set to Practice, a new set of pins is given with every throw.
- Pinsetter on when practice: if selected, when the Pinsetter control is set to Practice and the pinsetter is an AMF, instead of Practice, the pinsetter will be set in normal 10pin bowling
- Disable cycle with no active players: if selected, the API will not cycle the pinsetter if no player is active on lane
- Gutter / 7-10: if selected and the pinsetter has the capability to switch on second ball without cycling, this will happen if gutter or only pin 7 or only pin 10 or only pin 7 and 10 are knocked down
- Automatic foul line: if selected, the API will power ON and OFF the Foul lights as needed
- Respot enabled: actually not used

Advanced tab options

- **Hardware connection:**
 - "Off" -> no special interfacing available, only cycle
 - "Ball Change" -> pinsetter change ball capability - not yet implemented
 - "APS on 1st Ball" -> AMF APS on first ball only capability
 - "APS on 1st / 2nd Ball" -> AMF APS capability (1st and 2nd ball)
 - "Gutter plus Strike" -> for dumb pinsetter that needs to be informed if strike or gutter
 - "Gutter plus Strike also for Foul" -> VIA Bowling MC2 pinsetter
- **Tenth frame respot**
 - "None" -> no special cycles (No Tap, Foul, 10th frame, 10 pins in practice mode, etc.) performed
 - "Modified cycle" -> special capability (change ball, APS, strike, etc.) are used to perform special cycles (No Tap, Foul, 10th frame, 10 pins in practice mode, etc.) - not yet implemented
 - "Extra cycle" -> only the cycle is used to perform special cycles (No Tap, Foul, 10th frame, 10 pins in practice mode, etc.)

- Wait for 2nd Ball signal before Respot Delay: if selected and if "Extra cycle" respot is selected, the Respot Delay starts after pinsetter second ball lamp is activated and 1st ball Extra Cycle Delay starts after the end of Respot Delay, if not selected, the Respot Delay starts after the pins reading and 1st ball Extra Cycle Delay starts after the end of Respot Delay
- 1st Ball Cycle after photo: if selected, on first ball, the pinsetter is cycled after pins are read, if unselected, the pinsetter is cycled before pins are read
- 2nd Ball Cycle after photo: if selected, on second ball, the pinsetter is cycled after pins are read, if unselected, the pinsetter is cycled before pins are read
- Automatic Foul Line Management: if selected, on pinsetters without foul cycle, the foul cycle is emulated with modified cycle or extra cycle respot - not yet implemented
- Figures Enabled: Brunswick GS series capability - not yet implemented
- Respot Delay: delay before respot on second ball (see also Wait for 2nd Ball signal before Respot Delay)
- 1st Ball Extra Cycle Delay: delay before respot on first ball - not yet implemented
- 2nd to 1st ball Change Delay: if Hardware connection is Ball Change and Automatic Foul Line Management is selected, this is the delay before issuing a Change Ball for completing after pinsetter second ball lamp is activated during the emulated Foul cycle - not yet implemented
- Open Lane in Phase: if > 0 , when a lane is opened with names, after this delay, if the second ball lamp is active, a cycle is given.
- Power Off Delay: if Pinsetter control is Auto, this is the delay before powering OFF the pinsetter when the game is finished
- Ball Return Power Off Delay: if Pinsetter control is Auto, this is the delay before powering OFF the Ball Return motor after the pinsetter is powered OFF

To Speed Up more the cycles, you can trim the photo delay.

You must enter in Configuration->Pinsetter->Brunswick A1/A2 Standard and then modify the parameter 24 for left lane delay and 25 for right lane delay.

The default value is 150, it means 3s because the step is 20ms; you can try lower values.

After changing the values, you click on save and reboot the VLC to have these parameters reloaded.

I hope that all these information's are clear enough...